

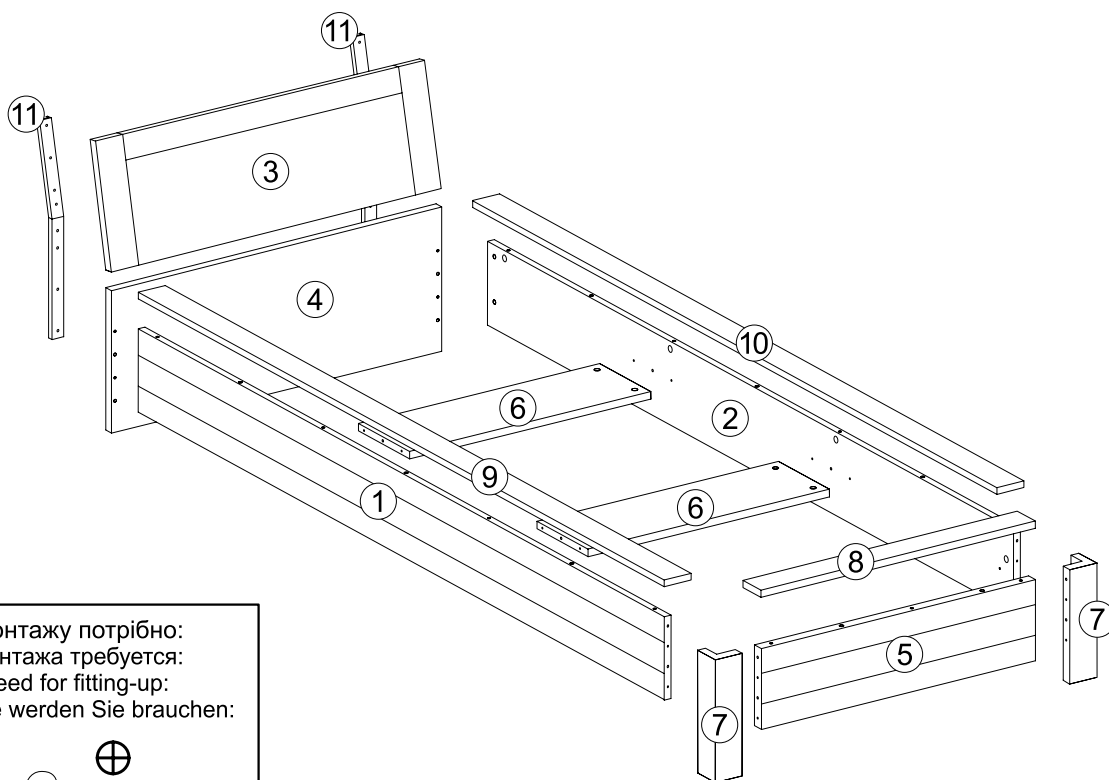


A	B	C	D	
1	KP2-169	2000	254	2/3
2	KP2-168	2000	254	2/3
3	KP2-029	1044	394	1/3
4	KP2-149	1044	465	1/3
5	KP2-150	903	254	1/3
6	KP2-351	999	200	2/3
7	KP2-510	335	70	2/3
8	KP2-496	904	70	2/3
9	KP2-444	2071	70	2/3
10	KP2-445	2071	70	2/3
11	n64	665	37	2/3














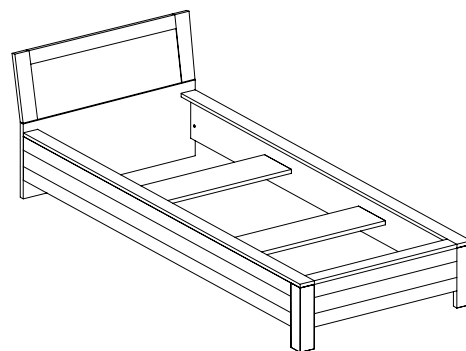


Для монтажу потрібно:
 Для монтажа требуется:
 You need for fitting-up:
 Zur Montage werden Sie brauchen:

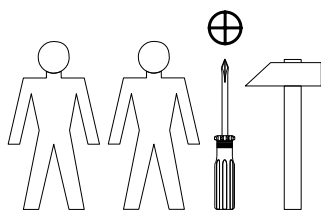

Пакет № 3/3








Фурнітура / Фурнитура










* Примітка: опора спинки **n64** знаходиться в пакеті **2/3**.

Примечание: опора спинки **n64** находится в пакете **2/3**.



1

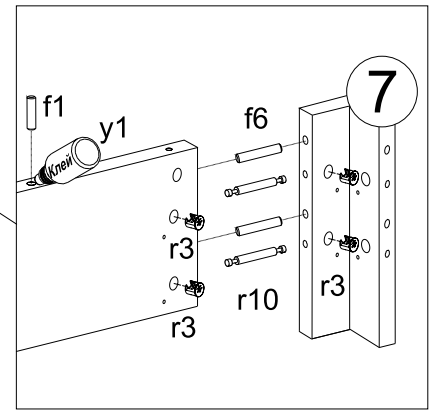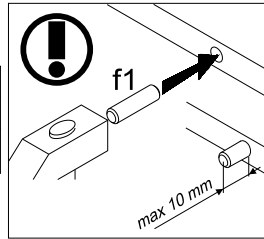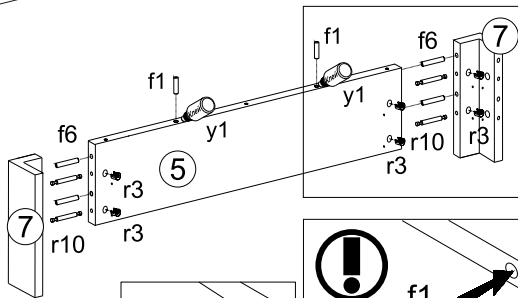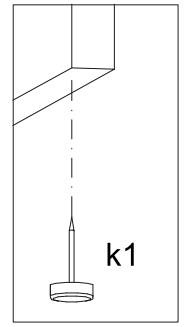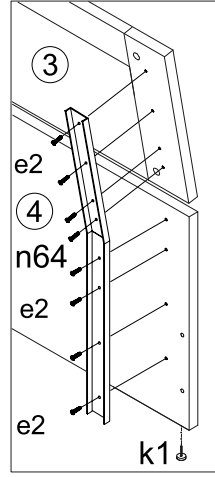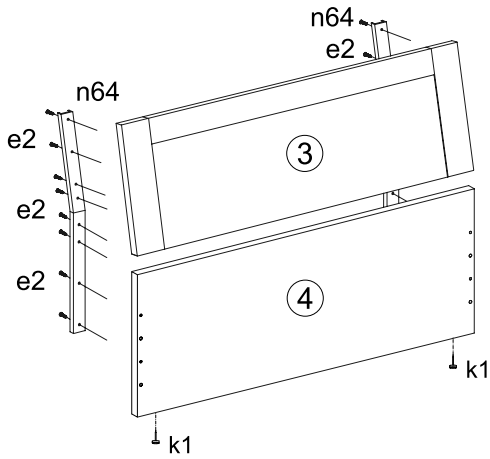



2

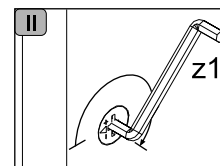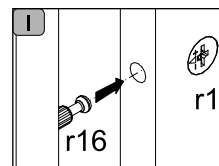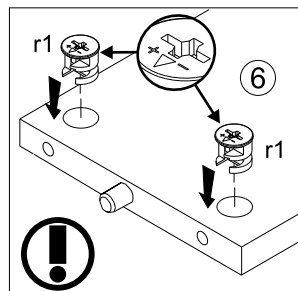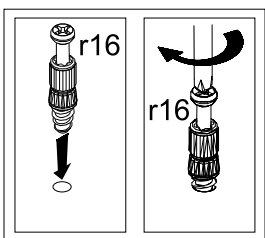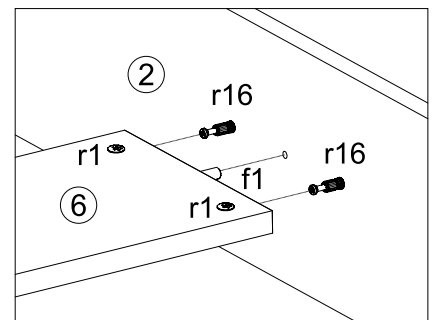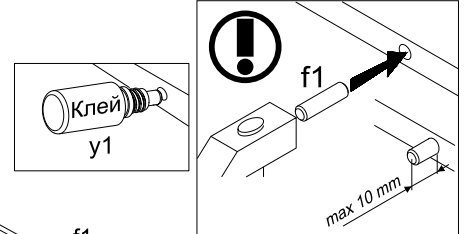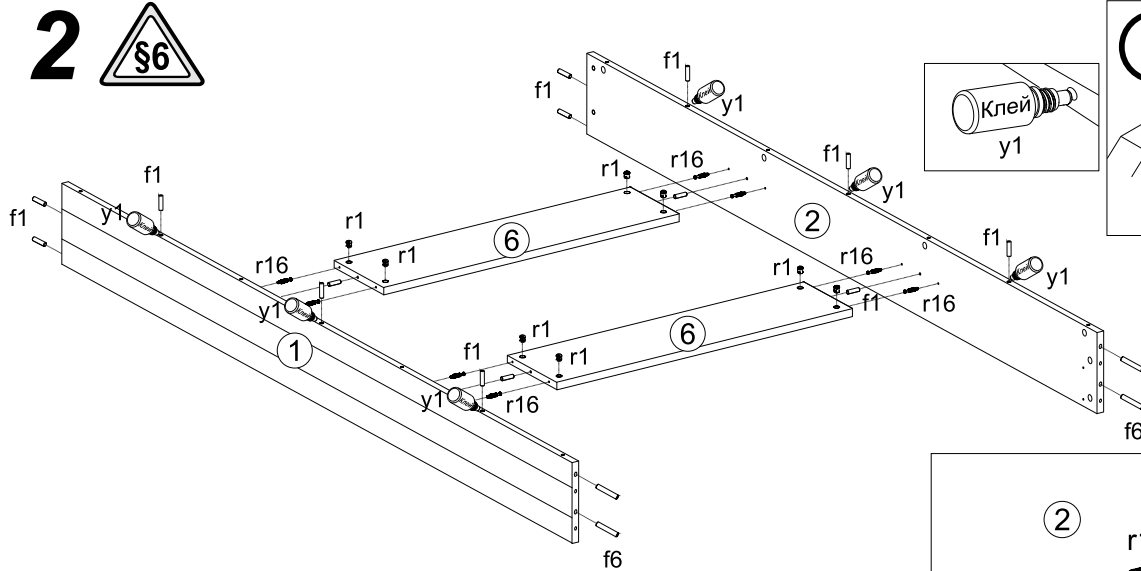







3

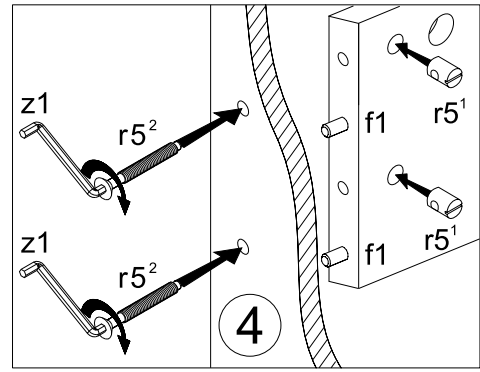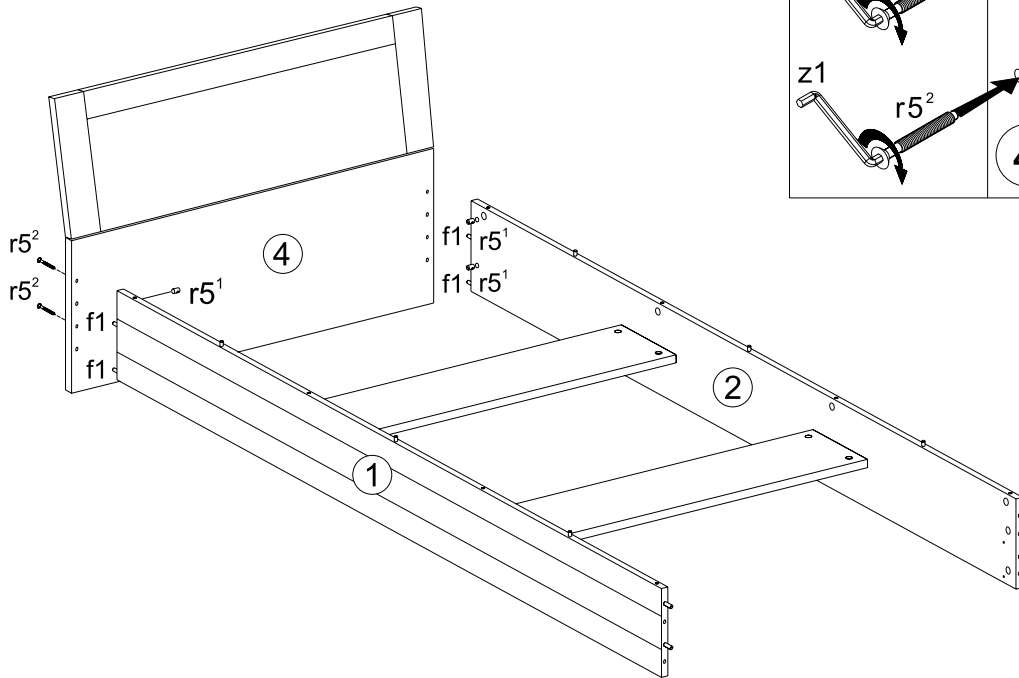

4

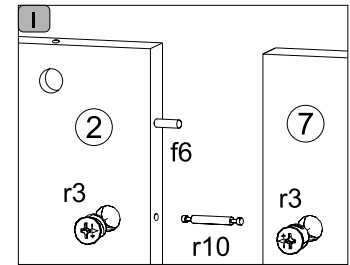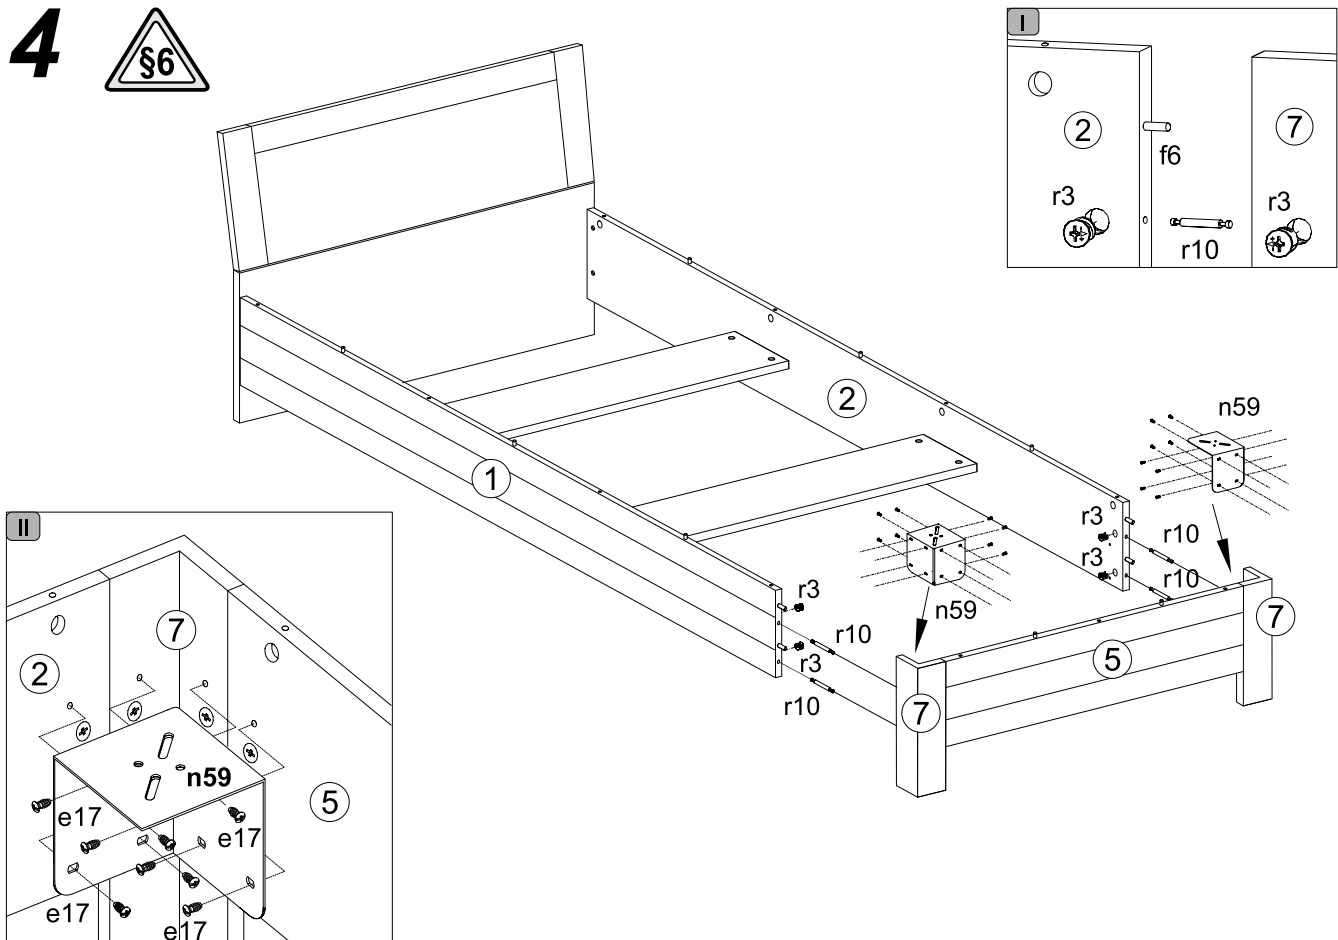

5

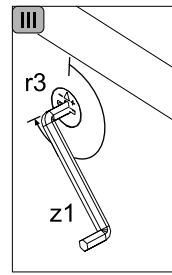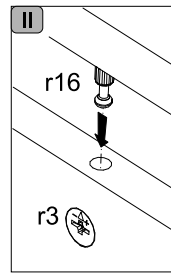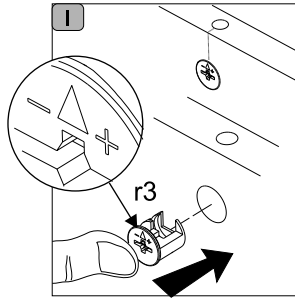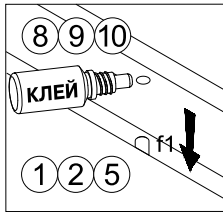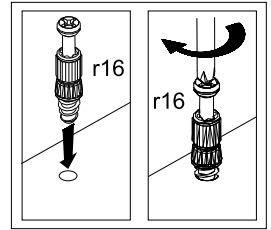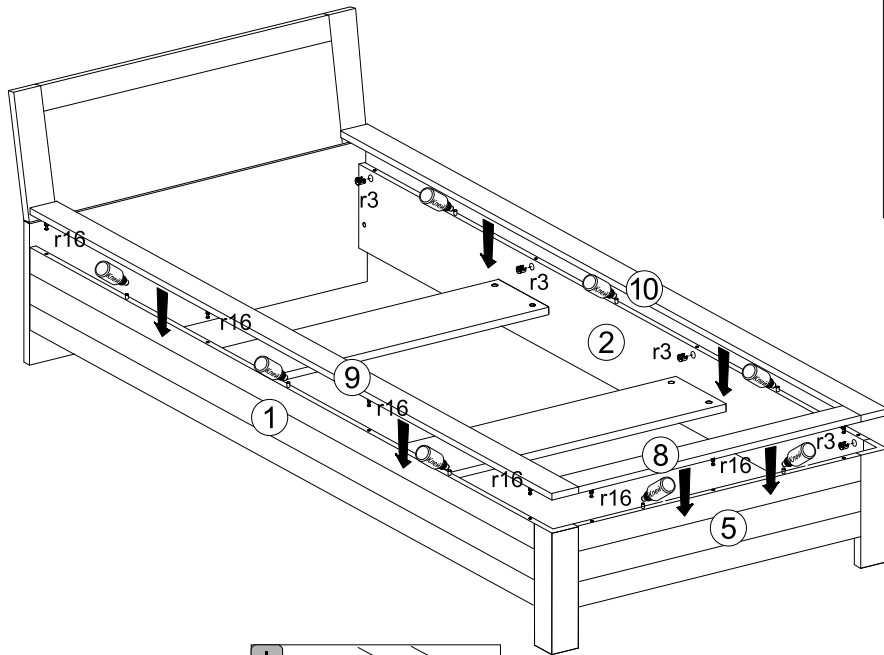

6

