
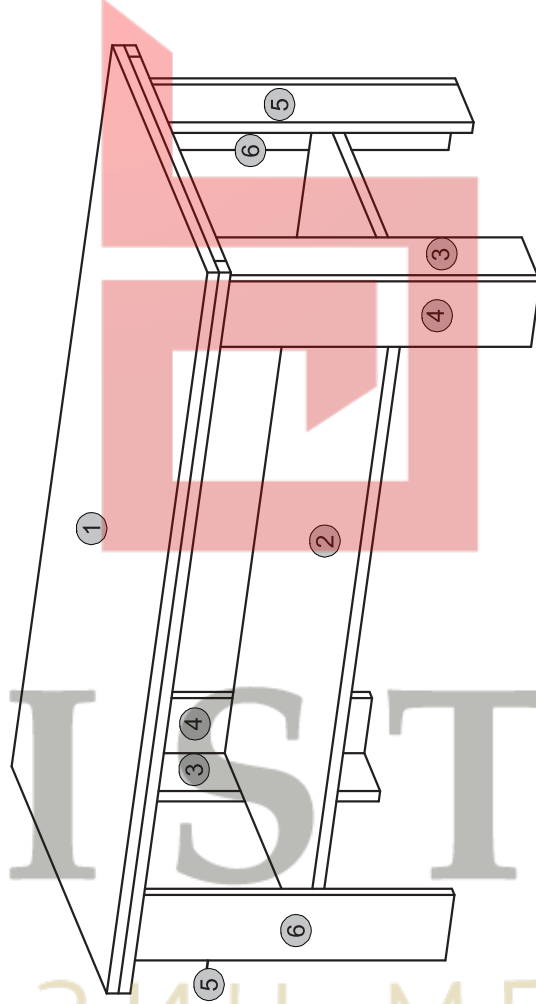
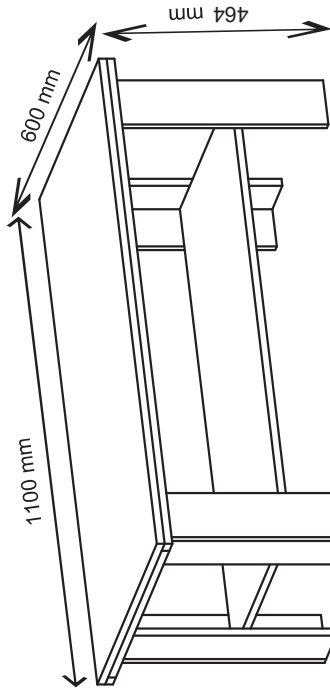
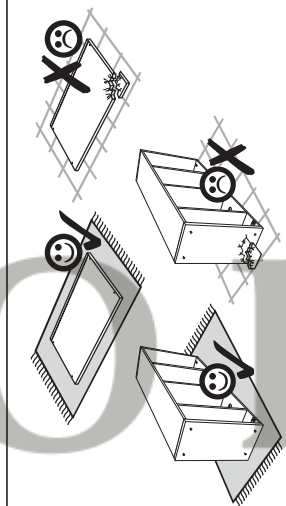
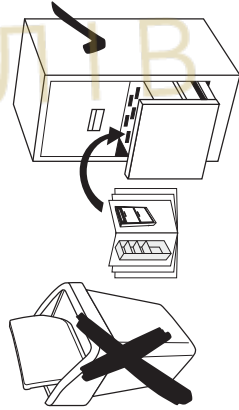
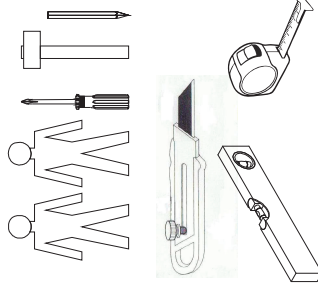
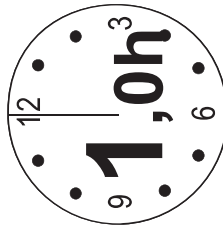





Instalation manual

STOLIK VERNE 7


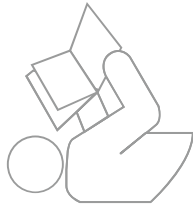


Element symbol	Dimensions	Code	Package
1	1100 600	LAWA 110x60.001	1/1
2	1004 504	LAWA 110x60.002	1/1
3	448 100	LAWA 110x60.003	1/1
4	448 100	LAWA 110x60.004	1/1
5	448 100	LAWA 110x60.005	1/1
6	448 100	LAWA 110x60.006	1/1


24X ø16	s2	1x y1	8x k1	1x y1
24X	r16	24X ø15x12mm #16	24X r1	16X ø8x30 mm f1

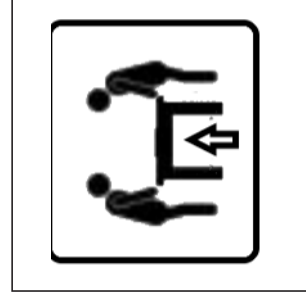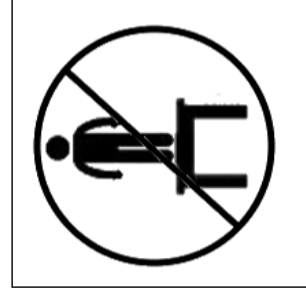


1

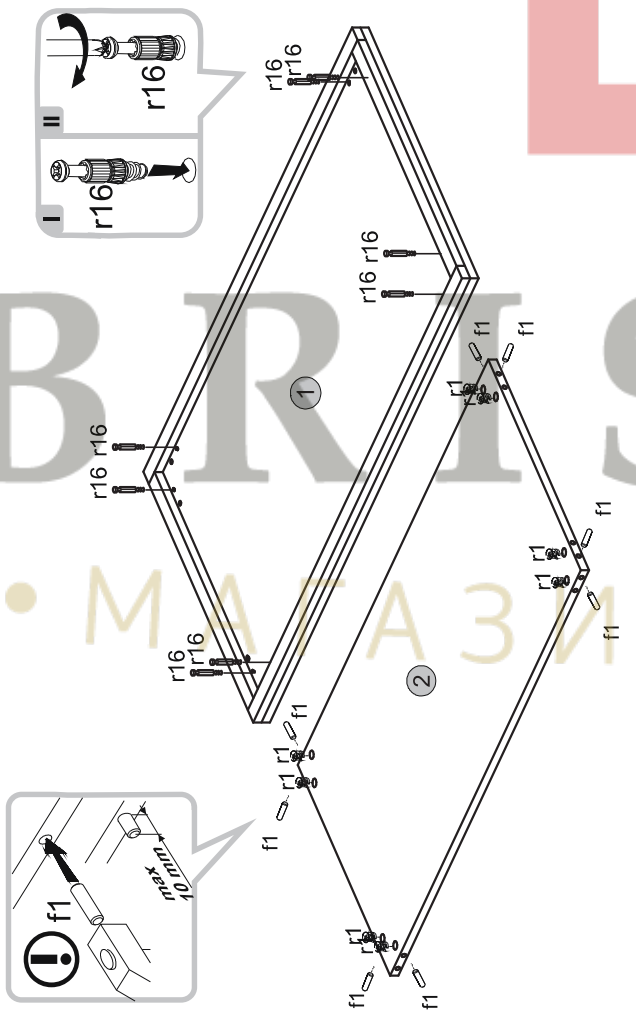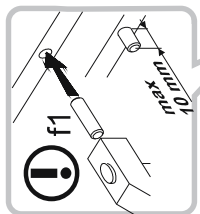

3

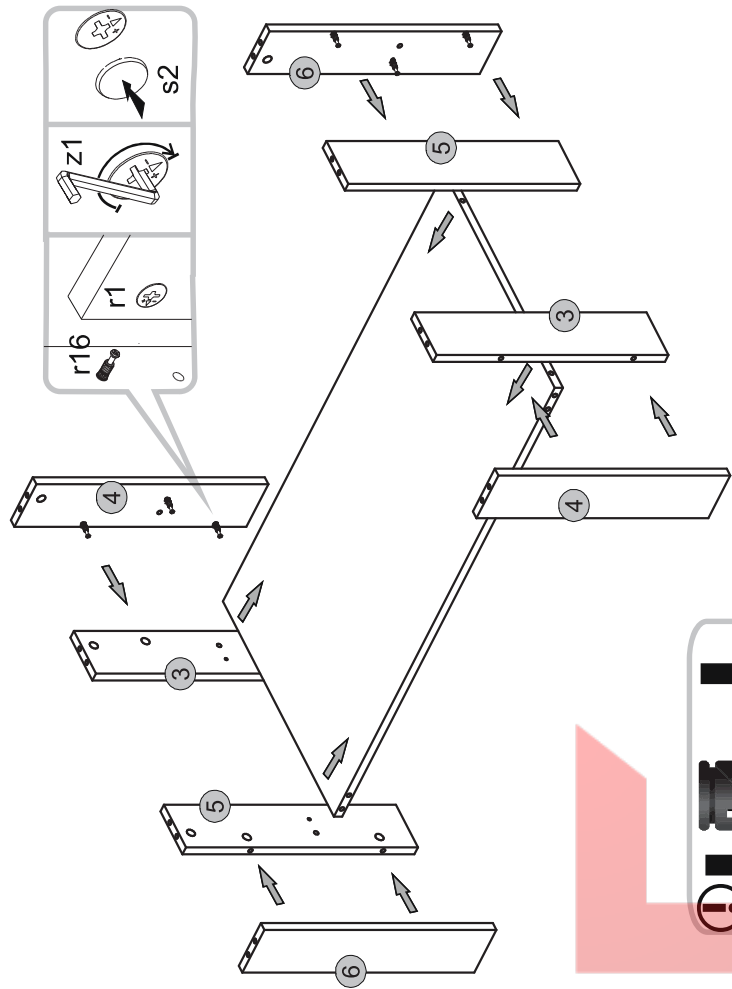


2

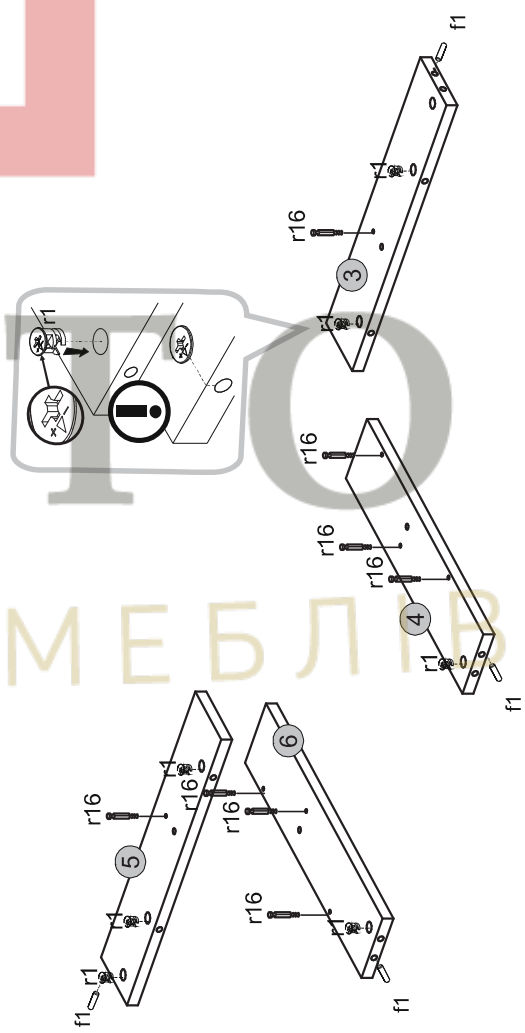

4



kg max 15 kg

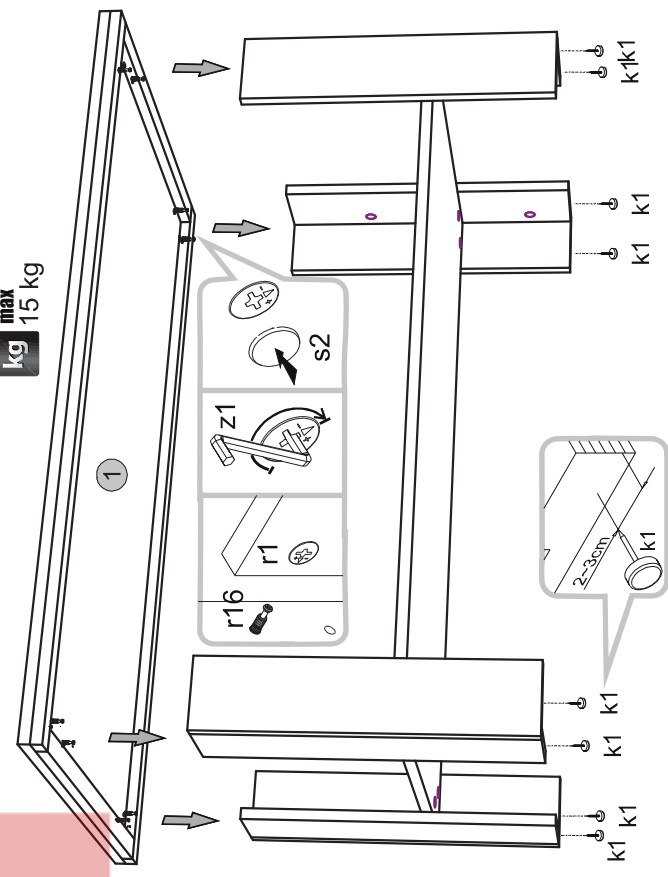

BRIS TOOL

• МАГАЗИН МЕБЛІВ •