

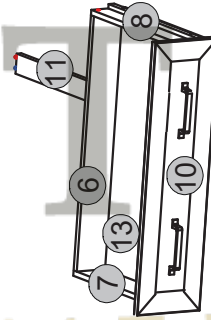
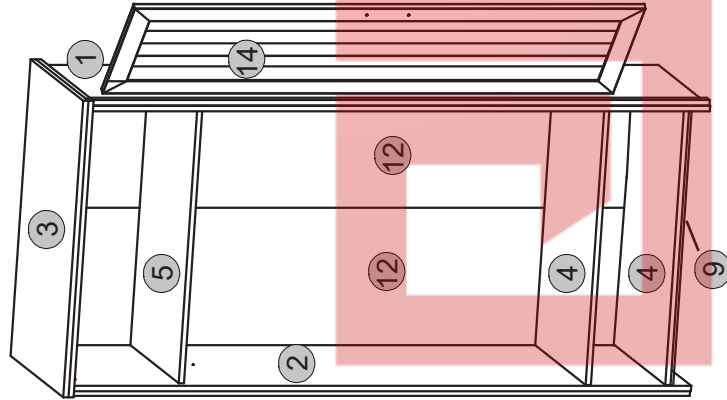
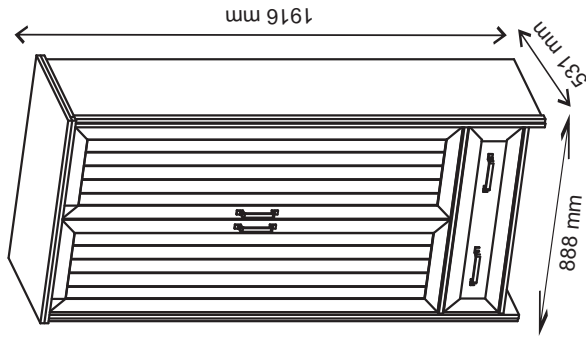
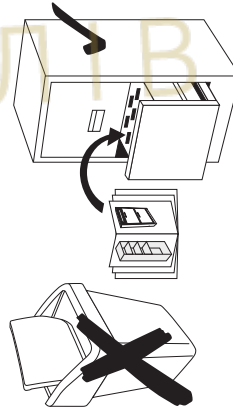
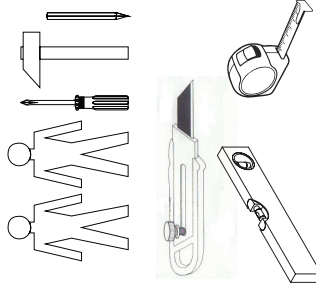
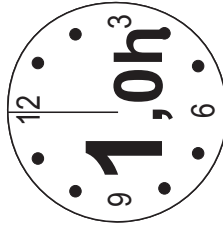


Instalation manual


SZAFA VERNE 6

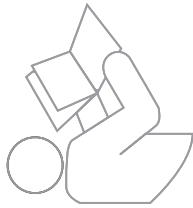


Element symbol	Dimensions	Code	Package
1	1884	SZF_2D1S_vagonka.001	1/4
2	1884	SZF_2D1S_vagonka.002	1/4
3	888	SZF_2D1S_vagonka.003	2/4
4	822	SZF_2D1S_vagonka.004	2/4
5	822	SZF_2D1S_vagonka.005	2/4
6	764	SZF_2D1S_vagonka.006	2/4
7	450	SZF_2D1S_vagonka.007	2/4
8	450	SZF_2D1S_vagonka.008	2/4
9	822	SZF_2D1S_vagonka.009	2/4
10	816	SZF_2D1S_vagonka.010	4/4
11	60	SZF_2D1S_vagonka.011	2/4
12	1849	SZF_2D1S_vagonka.012	1/4
13	782	SZF_2D1S_vagonka.013	2/4
14	1558	SZF_2D1S_vagonka.014	3/4
15	817		2/4

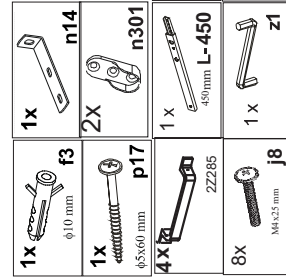


1

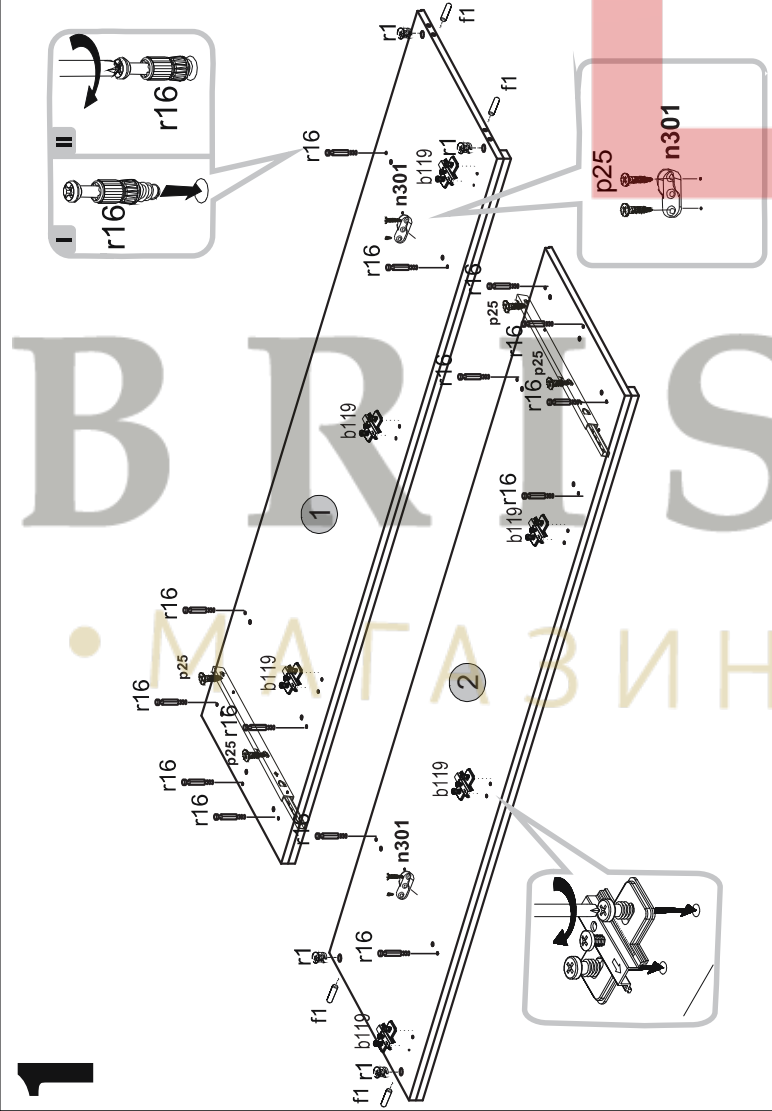


3

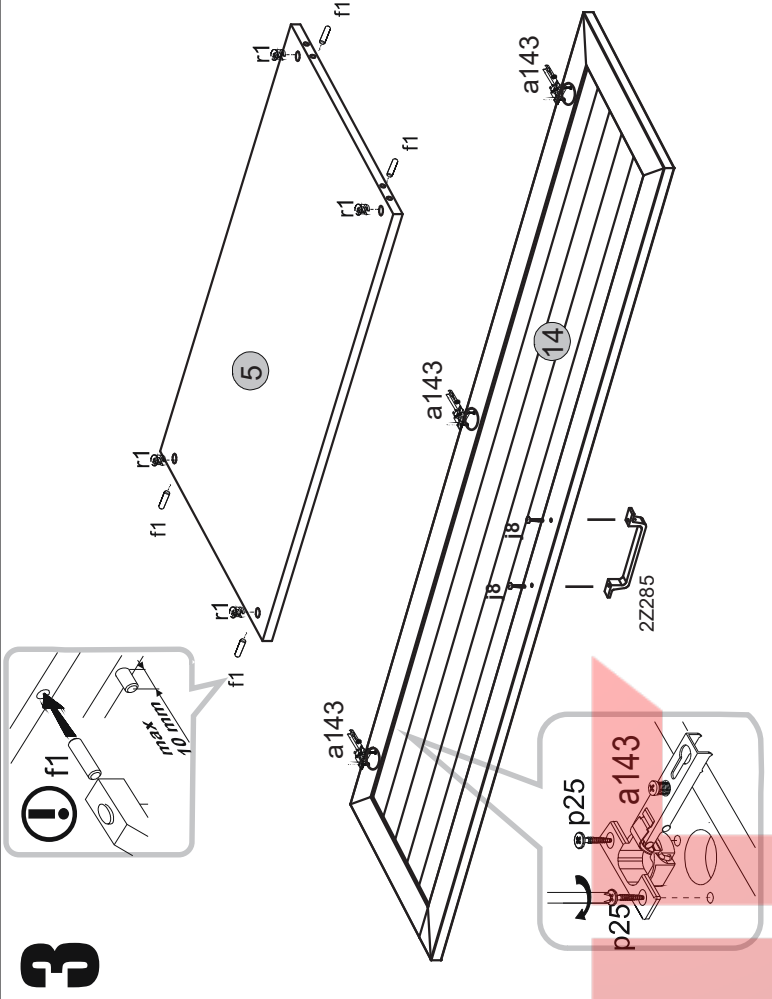


2

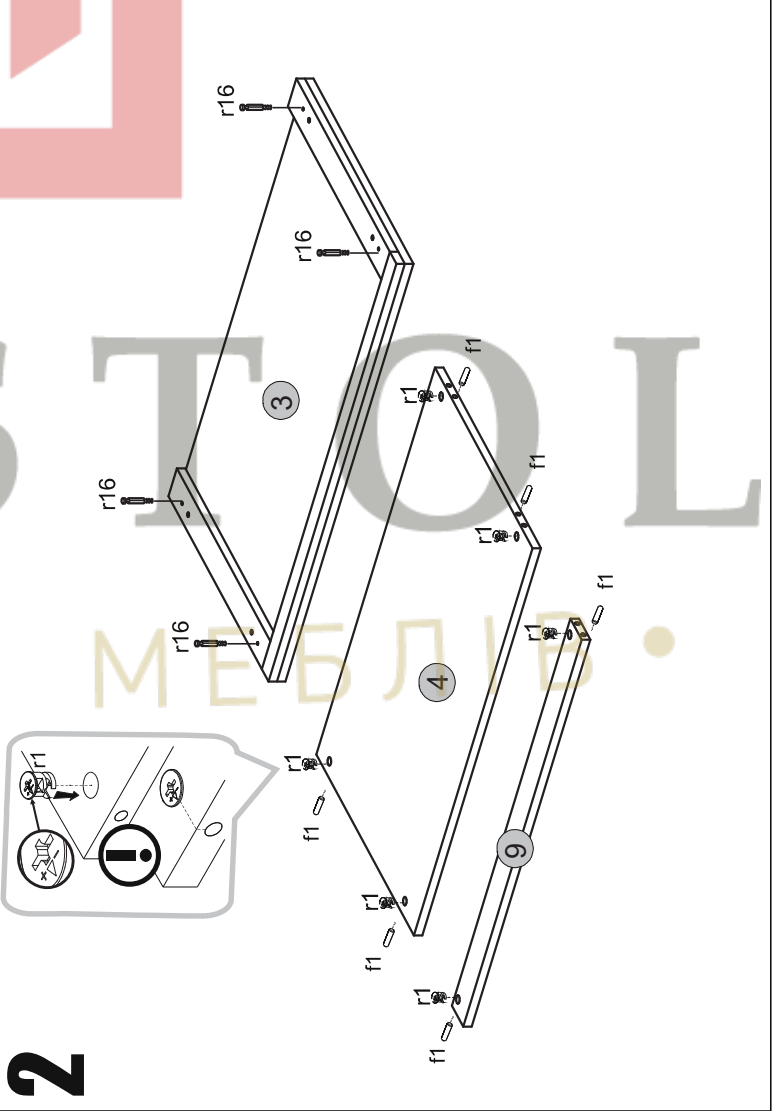


4

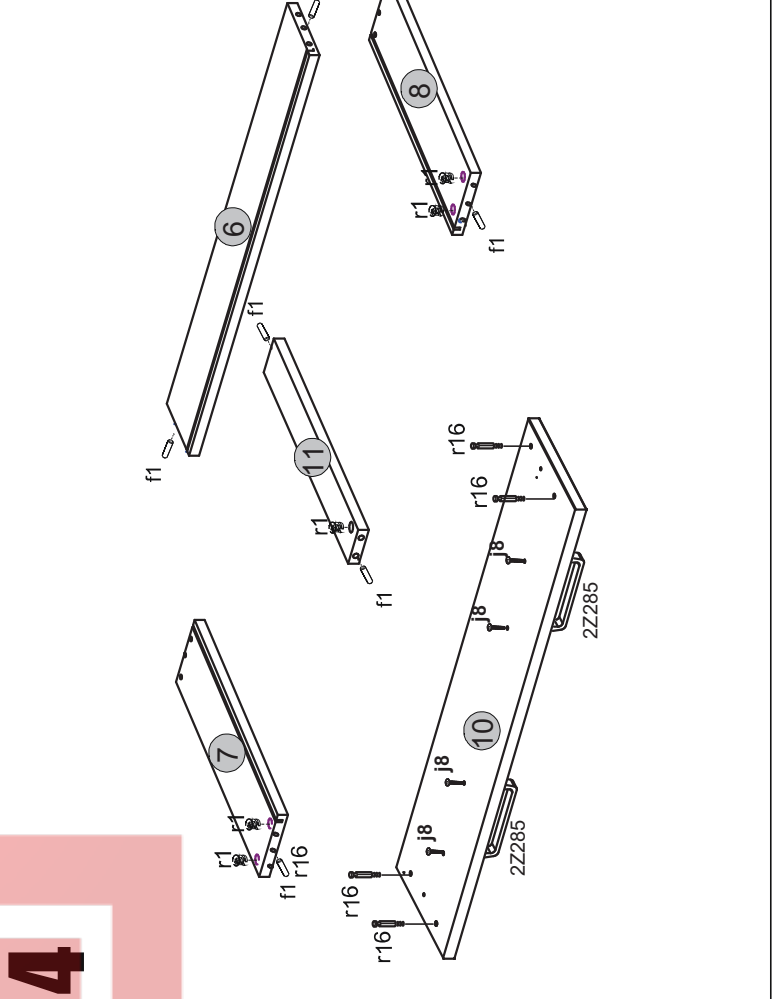


i a=b

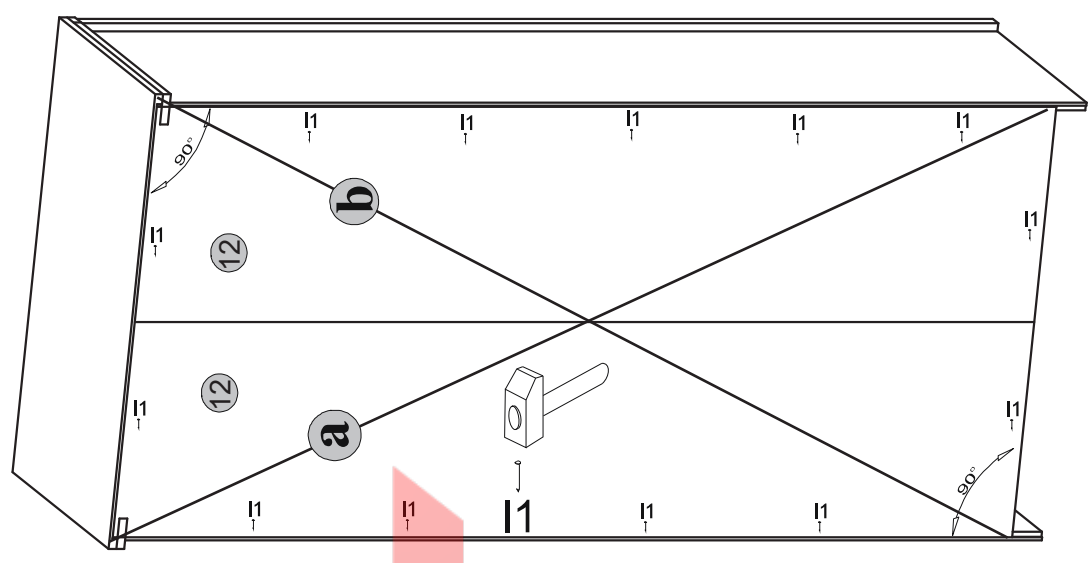

7

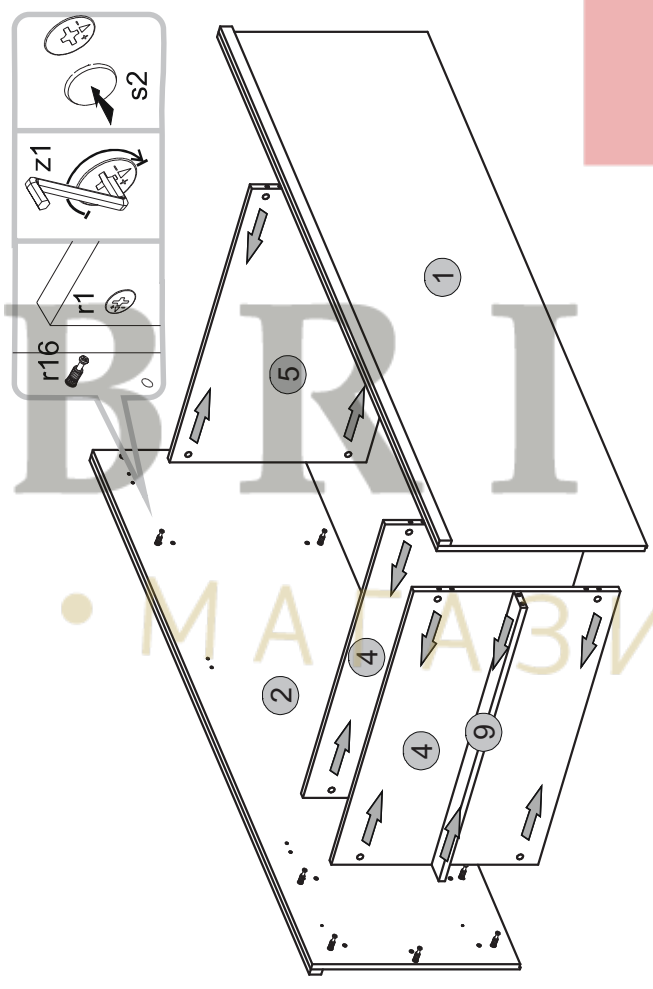

5






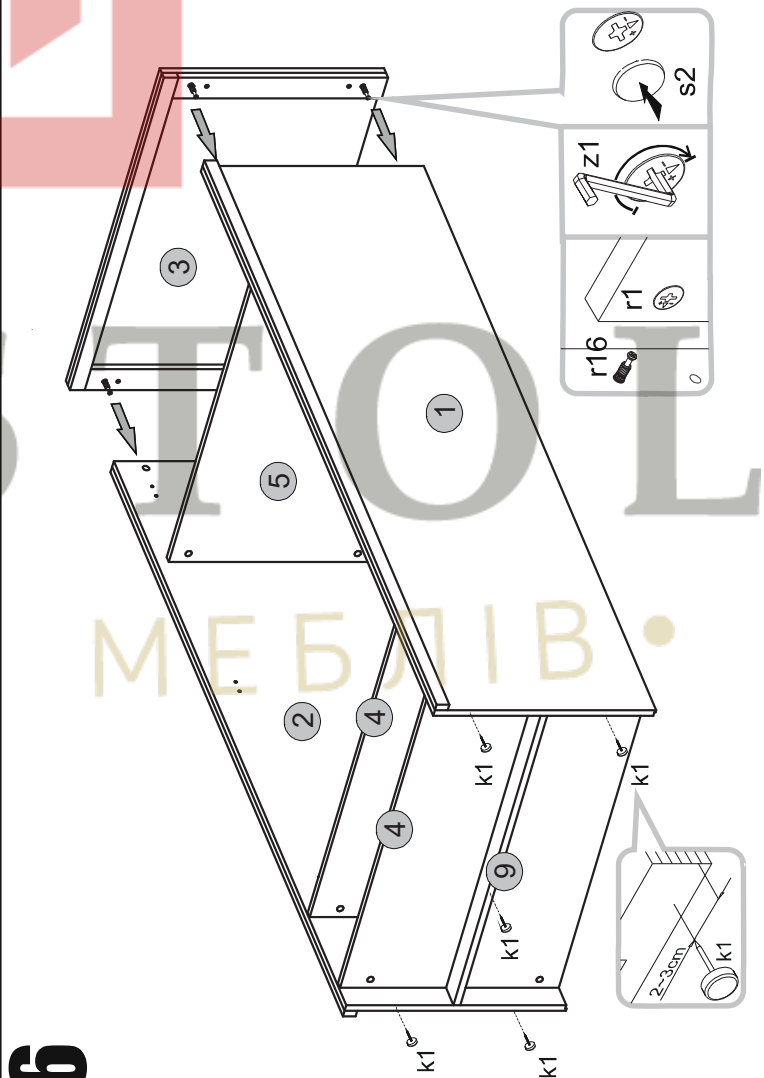


6

BRISTOL

МАГАЗИН МЕБЛІВ

8

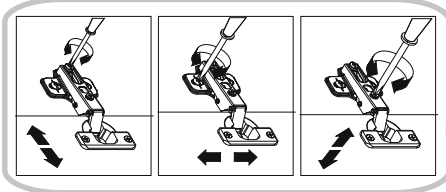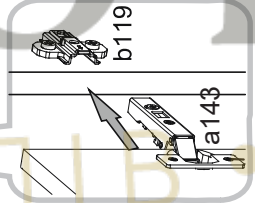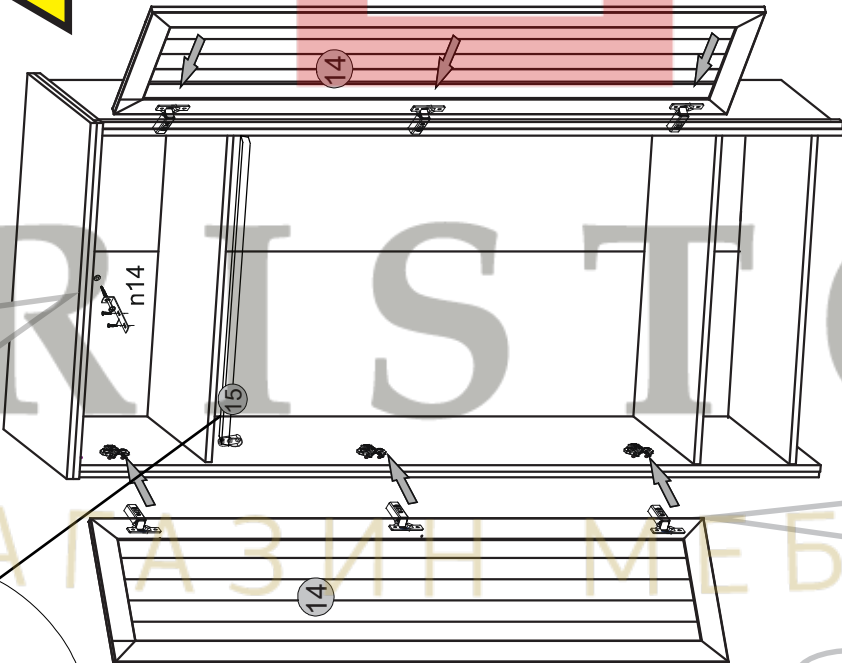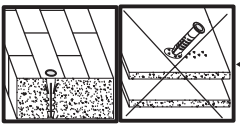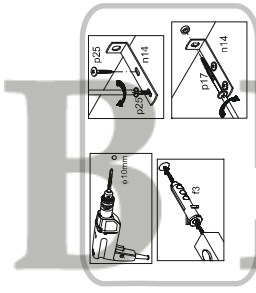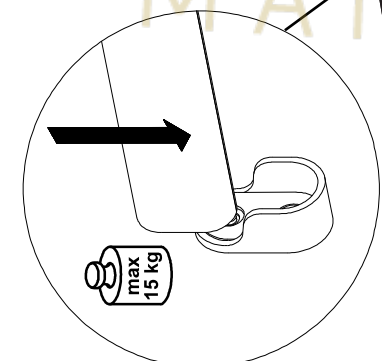

9

